 


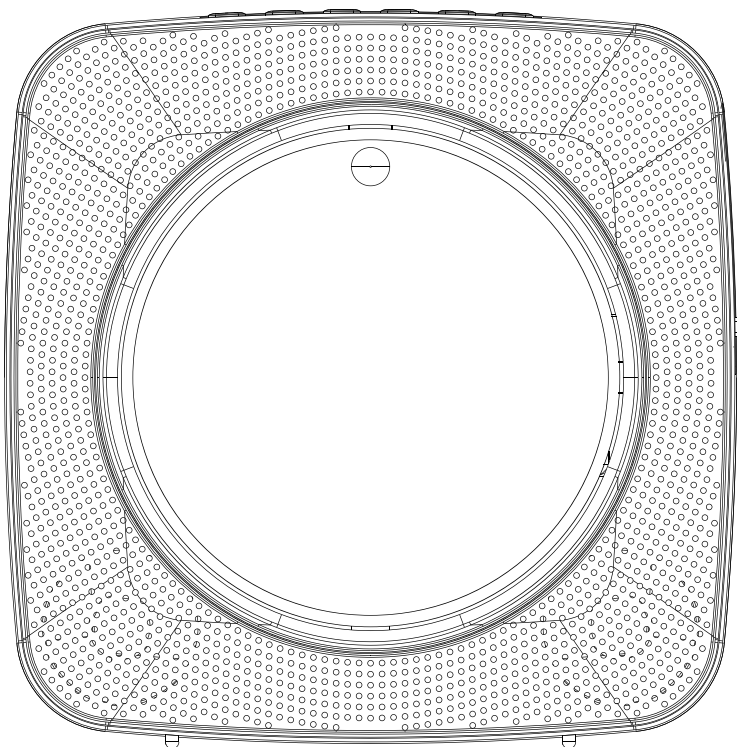

User Manual

Note: Please read the user manual carefully before use.
Be sure to read the instructions carefully before use.


Contents

Quick Start Guide	01
Safety Warnings & Case Alerts	01
Product Specifications	02
Installation Instructions	02
Desktop Stand Usage	02
Main Unit Description	03
Remote Control Usage	03
Voice Commands for Remote Control	04
CD Player Disc Playback Modes	05
USB Playback Mode Instructions	05
FM Radio Mode Instructions	05
Bluetooth Reception Guide	05
Bluetooth Transmission Guide	05
Indicator Light Descriptions	06
Troubleshooting & Technical References	06

● Quick Start Guide

1. Open the Dust Cover: Gently press the recessed area of the dust cover; the cover will pop up and can then be opened.

 2. Remove the Protective Paper: Take out the protective paper from the disc drive mechanism.

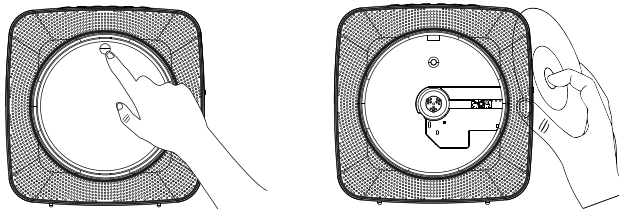

3. Connect Power: Plug the power cable into the Type-C charging port of the CD player. Insert the USB end into the USB female port of a 5V power adapter, then plug the adapter into a power outlet.

4. Insert Disc: Place a CD, CD-R, CD-RW, CD-MP3, or CD-WMA disc flatly into the disc tray of the drive mechanism. Flip the toggle switch to start the disc rotation, and enjoy the music.

5. Switch Modes with MODE Key: Press the MODE button briefly to cycle through CD mode, USB mode, FM mode, and Bluetooth mode.

6. Volume Down (-) Key: Press briefly to decrease the volume by one level; hold down to decrease the volume quickly.

7. Volume Up (+) Key: Press briefly to increase the volume by one level; hold down to increase the volume quickly.

8. Previous Track Key: Press briefly to play the previous song; hold down to fast rewind.

9. Next Track Key: Press briefly to play the next song; hold down to fast forward.

10. Play/Pause Key: Press briefly to pause or resume playback.

In CD/USB mode: Hold down for 3 seconds to enter/exit Bluetooth transmission mode.

In Bluetooth mode: Hold down for 3 seconds to enter Bluetooth reception mode.

11. Battery Version (if applicable):

Power Indicator Light: Stays solid red while charging; turns off when fully charged.

No-Battery Version (if applicable):

Power Indicator Light: Stays solid red while charging; turns off when not charging.

12. Bluetooth Transmission Mode:

Once entered, the indicator light will flash rapidly, indicating the device is waiting for a Bluetooth headphone connection. After a successful connection, the light will flash more slowly. In this mode, briefly pressing the MODE key can only switch between CD mode and USB mode. To exit Bluetooth transmission mode, hold down the Play/Pause button for more than 3 seconds.

After exiting Bluetooth transmission mode, briefly press the MODE key to switch among CD mode, USB mode, FM mode, and Bluetooth (BT) mode.

13. Reset the Device: Press and hold the MODE key for more than 8 seconds to enter the reset state.

● Safety Warnings

1. Use the Correct Adapter: Only use the provided 5V/2A DC adapter. Using other adapters may damage the device and void the warranty.

2. Dust Prevention for Long-Term Storage: If the device will not be used for an extended period, place a CD disc or the included dust protection paper to prevent dust from entering the CD player.


- 3.Disc Care: Do not use CDs with cracks or damage. Avoid touching the disc-reading laser head with your hands.
- 4.USB Mode Issues: If no content is detected in USB mode, check if the USB drive is damaged or if the song formats are supported.
- 5.Laser Safety: The disc drive's laser head is dustproof and greaseproof. Do not stare directly at the laser head when the device is powered on to avoid eye injury.

● **Product Parameter**

CD Supported Formats	CD,CD-R,CD-RW,CD-MP3,CD-WMA
USB Supported Format	USB 2.0
FM Radio Range	76.0- 108.0MHz
Rated Impedance	4Ω
Speaker Output	3Wx2
Rated Voltage/Current	5V/2A
Battery Capacity(Battery powered Version)	1800mAh
Charging Time(Battery powered Version)	Approximately 3.5 hours


● **Installation instructions**

- 1.Fix the wal-mounted plate on the wal with the included 4 screws
- 2.Hang the CD Player on the wall-mounted plate

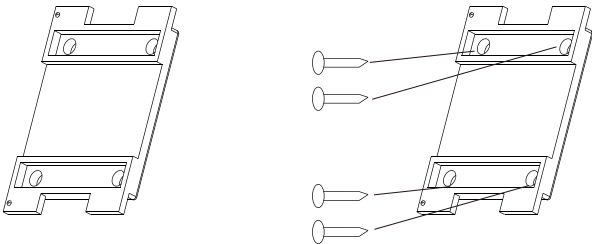


● **Desktop stand**


Lift the desktop stand outward, open the Angle to the maximum, and support it vertically on the desktop.

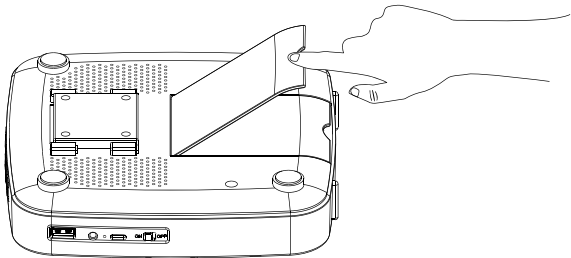

● Host Description

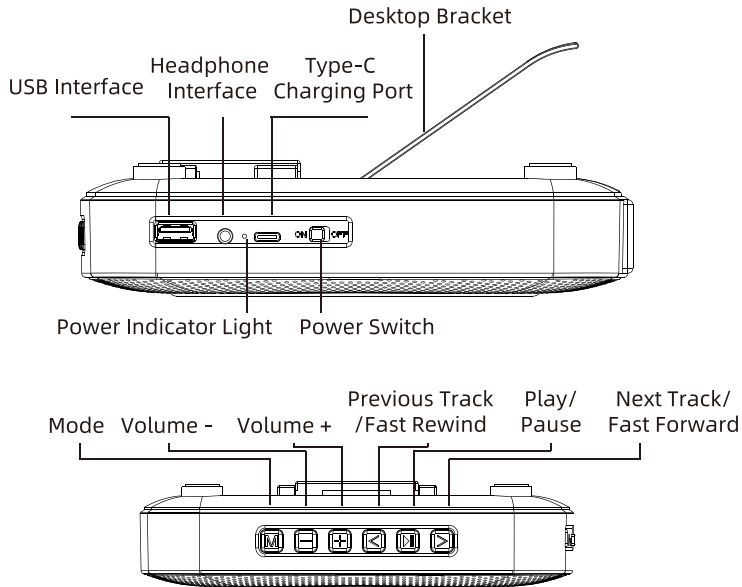

● Remote Control Operation Instructions

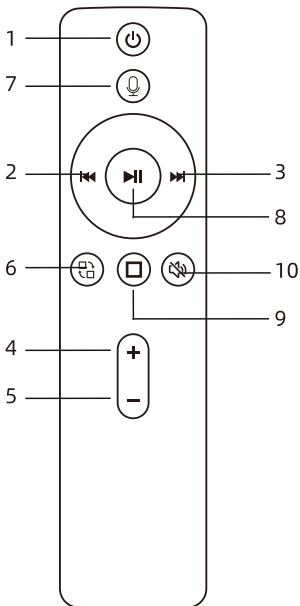

1.Power Off: Press briefly to turn off the device. To turn it back on, flip the power toggle switch again.

2.Previous Track: Press briefly to switch to the previous track. Press and hold to rewind quickly.

3.Next Track: Press briefly to switch to the next track. Press and hold to fast forward.

4.Volume + Key: Press briefly to increase the volume by one level. Press and hold to increase the volume quickly.

5.Volume - Key: Press briefly to decrease the volume by one level. Press and hold to decrease the volume quickly.

6.Mode Key: Press briefly to cycle through modes: CD mode → USB mode → FM mode → Bluetooth mode.

7.Voice Key: Press and hold the button, then speak the corresponding voice command.

8.Play/Pause Key: Press briefly to pause or resume playback.In CD/USB mode, hold down for 3 seconds to disconnect/reconnect Bluetooth transmission.

9.Stop Key: In CD/USB mode, press briefly to stop playback and enter standby status.

10.Mute Key: Press briefly to mute the sound; press briefly again to unmute.

Note: Before using the remote control, please install two 1.5V AAA batteries. The remote control will not function without batteries.

● Remote control voice commands

Command word	Voice response
CD mode	CD mode is on
USB mode	USB mode is on
radio mode/FM mode	radio mode is on/FM mode is on
Turn on Bluetooth transmitter	Bluetooth transmitter is ready to paired
Turn off Bluetooth transmitter	Bluetooth transmitter is off
Bluetooth mode	Bluetooth receiver is ready to paired
Volume up	Volume up
Volume down	Volume down
Minimum volume	Minimum volume
Maximum volume	Maximum volume
Play next song	Next song
Play previous song	Previous song
Continue playing	Continue playing
Pause	Pause
Turn on the light	Turn on the light
Turn off the light	Turn off the light
Play the first song	is playing
Play the second song	is playing
Play the third song	is playing
.....	
play the twentieth song	is playing
Power off	Power off

● CD Mode Instructions

Insert a CD, CD-R, CD-RW, CD-MP3, or CD-WMA disc into the disc tray of the drive mechanism, ensuring it is properly seated. Flip the toggle switch to start the disc rotation, and enjoy the music playback.

● USB Mode Instructions

Insert a USB flash drive into the USB port of the CD player. Briefly press the Mode button to switch to USB mode. The green LED will flash while reading the USB content, and remain steadily lit during playback. If the USB drive is not recognized, the red LED will stay lit continuously.

Audio Output: In CD/USB/FM modes, connect a 3.5mm audio cable. The built-in speaker of the CD player will automatically turn off, and the audio will be transmitted to external headphones or speakers via the cable.

● FM Mode Instructions

1. Press the Mode button on the remote control or the device itself to switch to FM mode.

2. Briefly press the Play/Pause button to start automatic station scanning. Once scanning completes, the first channel with a signal will play automatically. During the scanning process, briefly press the Play/Pause button again to stop scanning and save the currently found channels, then the first channel with a signal will play automatically.

3. In FM radio mode, briefly press the Previous Track or Next Track button to automatically switch to the next or previous channel.

● Bluetooth Reception Operation Guide (Connecting a Phone/Tablet to the CD Player)

1. Press the Mode button on the remote control or the device itself to switch to Bluetooth mode. Alternatively, long-press the Voice Key on the remote control and output the voice command "Bluetooth mode" to directly enter Bluetooth reception mode. You will hear a voice prompt: "Bluetooth transmitter is ready to paired". The CD player will prepare to pair with other Bluetooth devices (such as a phone, pad, etc.), and its indicator light color will turn dark blue.

2. In Bluetooth mode, long-press the Play/Pause button for 3 seconds to disconnect/reconnect Bluetooth.

3. Select the device named "Y-01" in your phone's Bluetooth devices to pair.

4. Play music on your phone/tablet, and the audio will be transmitted via Bluetooth to the CD player's speakers.

(Note: During pairing, it is best not to turn on other Bluetooth devices within a 10-meter radius. If pairing fails, check whether there are other Bluetooth devices turned on within a 10-meter radius.)

● Bluetooth Transmission Operation Guide (Connecting Bluetooth Headphones to the CD Player)

1. Press the Mode button on the remote control or the device itself to switch to CD/USB playback mode, preparing the CD player for pairing with other Bluetooth devices (such as Bluetooth headphones).

2. Long-press the Play/Pause button for 3 seconds, or long-press the Voice Key on the remote control and output the voice command "Turn on Bluetooth transmitter" to enter Bluetooth transmission mode. You will hear a voice prompt: "Bluetooth transmitter is ready to paired".

3. Activate your Bluetooth device, and the player will automatically pair with it.

(Notes: During pairing, it is best not to turn on other Bluetooth devices within a 10-meter radius. If pairing fails, check whether there are other Bluetooth devices turned on within a 10-meter radius. If the Bluetooth headphones cannot pair with this device, reset the Bluetooth headphones and try connecting again.)

● Indicator Light Status

Indicator Light Status.....Description

Solid Cyan Light.....CD Mode

Rapidly Flashing Cyan Light.....In CD Mode - Bluetooth Transmission Mode, searching for pairing (disconnected)

Slowly Flashing Cyan Light.....In CD Mode - Bluetooth Transmission Mode, successfully connected

Solid Green Light.....USB Mode

Rapidly Flashing Green Light.....In USB Mode - Bluetooth Transmission Mode, searching for pairing (disconnected)

Slowly Flashing Green Light.....In USB Mode - Bluetooth Transmission Mode, successfully connected

Solid Red Light.....CD and USB drives not detected

Solid Purple Light.....FM Mode

Flashing Purple Light.....In FM Mode - searching for stations

Flashing Blue Light.....Bluetooth Reception Mode - searching for pairing (disconnected)

Solid Blue Light.....Bluetooth Reception Mode - successfully connected

● Troubleshooting and Technical Reference

1.Remote Control Not Working

Cause 1: Insulation sheet not removed.

Solution 1: Check if the insulation sheet in the battery compartment has been removed.

Cause 2: Remote control out of power.

Solution 2: Check if the remote control batteries are drained.

Cause 3: Remote control is too far from the CD player.

Solution 3: When operating the remote, aim it at the front of the player. Ensure the remote is within a reasonable distance.

Note: The remote cannot turn the player on/off. Use the power toggle switch on the player itself.

2.CD Player Malfunction

Cause 1: Player not powered on.

Solution 1: Check if the player is properly connected to power.

Cause 2: Incorrect power supply.

Solution 2: Verify the power connection and ensure the power adapter meets the standard 5V/2A specification.

Cause 3: Player operating under extreme temperature variations.

Solution 3: If the player operates in significant temperature fluctuations, condensation may fog the laser head, causing malfunction. Let the CD player sit for 1 hour to dry before powering on and attempting to play a CD.

3.Disc Not Readable

Cause 1: Disc improperly installed.

Solution 1: Ensure the disc's labeled side faces up and is fully inserted into the tray.

Cause 2: Disc format not recognized.

Solution 2: The player only supports CD formats.

Cause 3: Disc is dirty or damaged.

Solution 3: Ensure the disc has no severe scratches or damage. Gently wipe the disc with a clean, soft cloth from the center outward toward the edge. Try another new disc to check if the issue persists.

Cause 4: Laser head is dirty.

Solution 4: Gently clean the laser head with a cotton swab dipped in alcohol. Note: Do not touch the laser head directly with your fingers.

材质工艺要求:
材质:80g书纸
尺寸:单页尺寸148x210mm
工艺:双面印刷
装订: 风琴折
印刷颜色:以文档实际色彩为准
色 相正 确、印迹牢固
套印准确、各色套印
不露杂色, 套印误差<0.1mm
模切走位±0.5mm
说明书边缘为直角, 不做R角

注: 此页不需要印刷, 仅展示印刷需求, 印黑白